


INSTALLATION INSTRUCTIONS

TACO[®]
M A R I N E


ROD & REEL TOTE 'M RACK (WITH WALL MOUNT) P03-144W

CONTENTS:

- A) Base
- B) End piece for rod butts (reel end)
- C) End piece for rod tips
- D) 4 - #8 x 5/8" O.H. Stainless screws
- E) Shock cord to secure rods
- F) Mounting bracket
- G) Stainless pin
- H) 2 - #8 x 1-1/4" Pan HD. Stainless screws

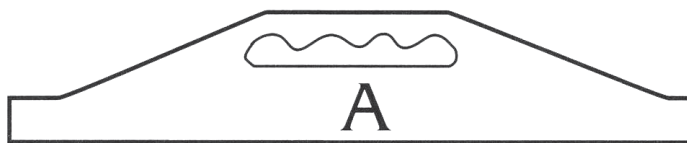

Patent #6,267,425

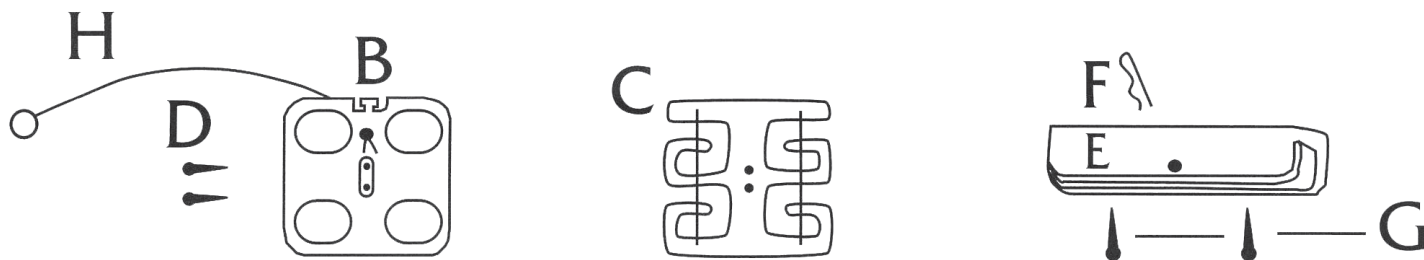

1. Install ends (B) and (C) in the pre drilled holes in the base (A) - use screws described in (D).
2. Mount bracket (E) to surface (horizontally or vertically) with screws described in (G).
3. To use bracket, match up the holes in handle (A) and in mounting bracket (E) and install pin (F).